



F & S Series Speed / Incline Calibration

When replacing the upper computer the incline / speed will need to be recalibrated. To enter calibration mode use the following steps:

Remove tether cord

Press and hold the Start, Slow & Fast switches.

Replace tether cord while maintaining switches: Display will show "Factory Setting".

Press Enter to start.

Display will show:

1. Units English / Metric. Press Up / Down to change. Press Enter to continue.
2. Adjust Wheel Diameter to 2.75. Press Enter to continue. (Wheel diameter must be correct to achieve proper belt speed.)
3. Adjust Minimum Speed to .5. Press Enter to continue.
4. Adjust Maximum Speed to 12. Press Enter to continue.
5. Adjust Maximum Elevation to 15. Press Start to begin Auto Calibration.

WARNING - Do not stand on belt for the next step.

Press Start to begin Auto Calibration.

Unit will run speed calibration then incline calibration. Upon completion display will shut down. Unit is now calibrated.

For more information, please contact our SOLE Service Department.

www.soletreadmills.com

Fill out form at <https://soletreadmills.com/technical.php?p=service>

866-MYSOLE1 (866-697-6531)