

Console Board Replacement: S77, S73, F85, F83, F85, TT8, and U

Speed quick keys

Pulse grips

Incline quick keys

(R) Speaker
Amp Board (Red Plugs)
(L) Speaker

Fan Plug (If available
on model)

Hear Rate Receiver

Incline Switch for
handrail.

Speed Switch for
handrail.

Upper Harness

Safety Switch for tether cord.

