

Slide wheel replacement instructions

1. Remove the wheel cover that is held on by two Phillips head screws.
2. Using snap-ring pliers, remove the snap ring.



3. There should be a wave washer on each side of the wheel. Once the new wheel is put on make sure that each washer is where it should be.
4. Put snap ring back in place using pliers.