

## Lubing the pull pin

Occasionally, a pedal will develop a squeaking noise where the pull pin is used to adjust the angle of the foot pad. If this happens, lubing the pull pin periodically may be a necessary maintenance that needs to be performed by the owner. This is very simple to do and only requires the tube of lube that came with the unit.



1. Pull on pin as pictured below and apply lube on all sides of the square pin where arrows are pointing.

