

## Removing the pedal arm bushing housing

1. To remove the bushing housing, you need to remove the plastic cover that goes over the end of the pedal arm.
2. Take the nut off of the bolt that goes through the pedal arm and the bushing housing. To do this you need an allen wrench and a 13mm wrench.



3. When you pull out this bolt, you can slide the pedal arm off of the bushing housing.
4. Remove the hex head bolt and washer. Slide the bushing housing off of the axle.