

## Connecting arm replacement instructions

1. Remove the plastic covers that are cover the hinge at the end of the connecting arm and handle bar.



2. Remove the bolt that holds connecting arm to the handle bar.



3. Remove the carriage bolt that is under the pedal that holds the connecting arm to the pedal arm.



4. Put the new connecting arm in place and insert the carriage bolt.
5. Connect the end of the connecting arm to the end of the handle bar with the nut and bolt and replace the covers.