


## Installing spacer

1. Take off these three covers. Repeat on other side.




2. Remove these two bolts. Remove swing arm, connecting arm, and step arm all in one piece. Repeat on other side.

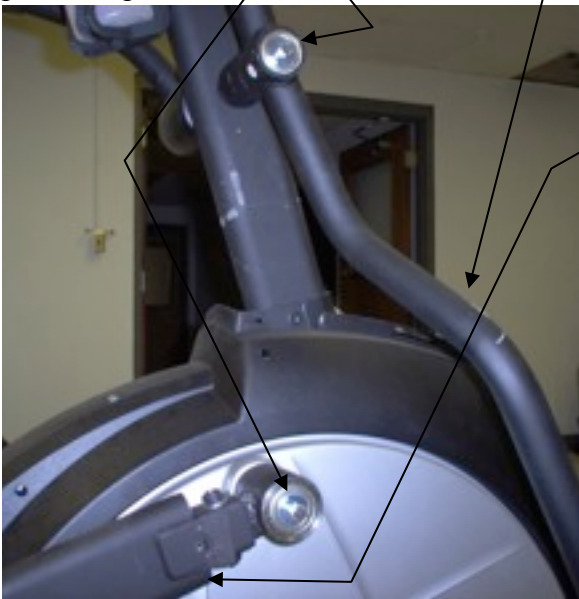


3. Take off right and left chain covers. There should be 10 screws on the right side and 4 that hold the left side on (3 on the bottom and one on the right side near the mast).

4. Remove small access cover, remove the two bolts, and slide cross member off of axel. Repeat on other side.

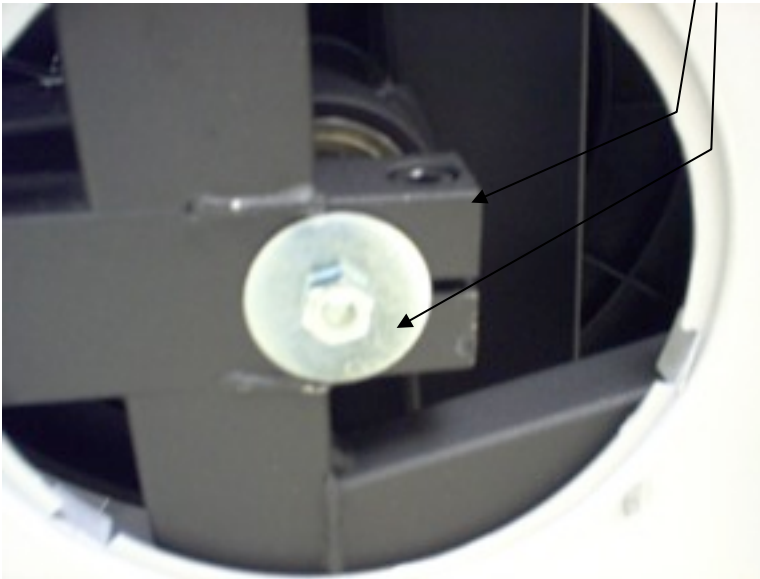

5. Loosen nut that tensions the drive belt. (It may help to loosen this nut)

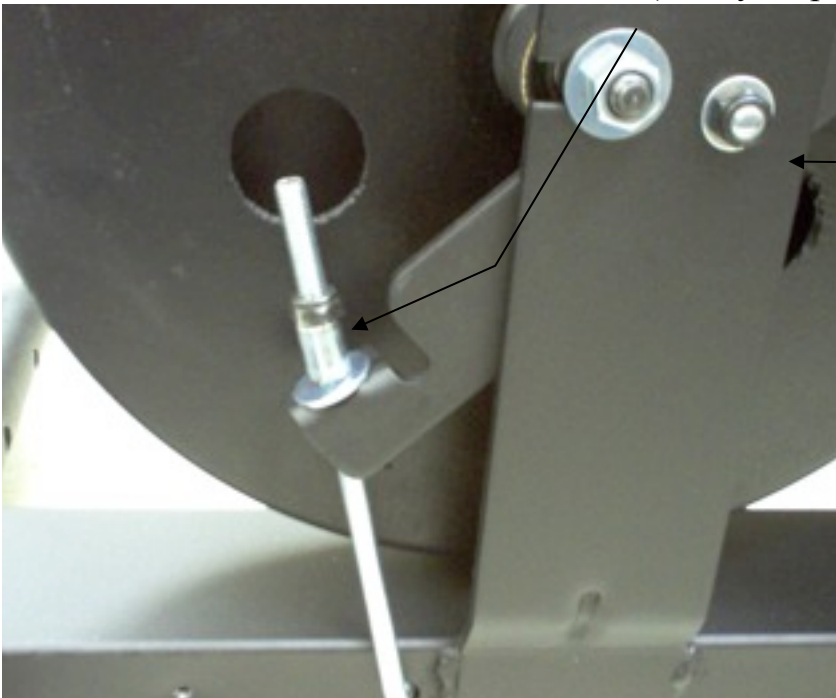

6. Once the belt is loose, slide it off of large pulley.

7. On left side, take two snap rings off of axel.



8. Slide axel out from the right side and put spacer in place.



9. Reverse procedure to reassemble.