

Calibration FT96

1. CALIBRATION

- a) Turn on power.
- b) Press and hold ⓄSTARTⓄ and ⓄFASTⓄ button at the same time.
- c) Inserts the SAFETY KEY on console, all windows will appear blank.
- d) Metric/English Mode: Press ⓄUP/DOWNⓄ button to exchange to Metric Mode in Message window and the value is English. Press the ⓄENTERⓄ button to the next step.
- e) Set wheel size: Press ⓄUPⓄ or ⓄDOWNⓄ button to adjust Message window to 2.3. Press the ⓄENTERⓄ button to the next step.
- f) Set Min. speed: Press ⓄFASTⓄ or ⓄSLOWⓄ button to adjust Message window to 0.6. Press the ⓄENTERⓄ button to the next step.
- g) Set high speed: Press ⓄFASTⓄ or ⓄSLOWⓄ button to adjust Message window to 10.0. Press the ⓄENTERⓄ button to the next step.
- h) Set high incline position: Press ⓄUPⓄ or ⓄDOWNⓄ button to adjust Message window to 15. Press the ⓄENTERⓄ button to the next step.
- i) Press ⓄSTARTⓄ button to memorize all value, the treadmill will calibrate automatically.
- j) After calibrating, treadmill will reset then enter ⓄREADY MODEⓄ.