


# Foot Rail replacement

1. Remove the screw that holds the rear adjustment cap in place using a Phillips head screw driver. Once the screw is removed, pull the cover toward you and it will slip off.



2. You just need to loosen these two screws.

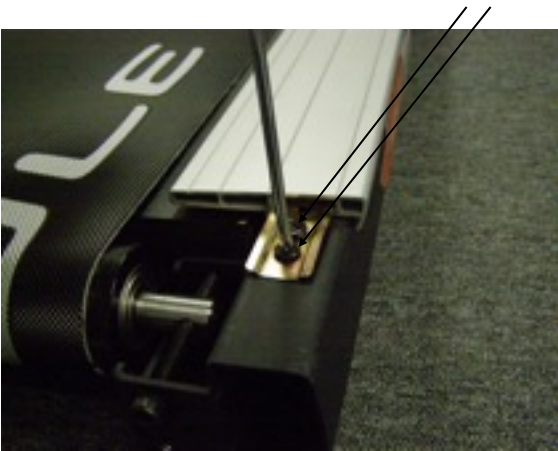


3. There are 5 screws in the motor hood that need to be loosened. There are three in the back and one on each side. Once these are loose, you will need to remove the motor hood.



4. Slide this little cover away from the aluminum rail and loosen this screw.



5. You will be able to slide the foot rail off. It will be a little tight, but it will slide off.

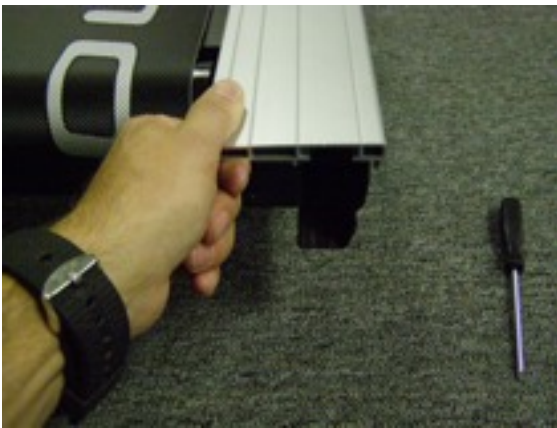

6. Slide the new foot rail into place. Tighten screws that were loosened and replace plastics that were removed.